

To Migrate from EntraPass Corporate to Global Edition

Purpose

Provide installers with simple instructions for migrating from EntraPass Corporate Edition to EntraPass Global Edition. Data (doors, schedules, access level, cards, etc.) programmed within EntraPass Corporate Edition will be automatically converted into EntraPass Global Edition.



Under the EntraPass Global Edition, the gateway created will be a Corporate gateway with no Global functionality.

For complete information on EntraPass Corporate Edition software, please refer to the *EntraPass Corporate Reference Manual*, DN1415.

For complete information on the EntraPass Global Edition software, please refer to the *EntraPass Global Reference Manual*, DN1316.

Requirements

- EntraPass Corporate Edition already installed
- Installer logon name and password.
- EntraPass Global Edition installation cd.
- Minimum hardware requirements: Pentium III 800 MHz. minimum processor, 256MB. minimum RAM recommended, 4GB minimum free hard disk space recommended for software, 24-Bit (16 million colors) color depth, 10/100 base-T network adaptor interface card, Windows 98/NT/2000/XP/2003 operating system compatibility.


Instructions

The migration from EntraPass Corporate Edition to Global Edition will be done in 6 easy steps:

1. Backup the EntraPass Corporate Edition Database..... 2
2. Install the EntraPass Global Edition Software 2
3. Run the Migration Utility..... 3
4. Run the EntraPass Global Edition Software 3
5. Register the EntraPass Global Edition Software 3
6. Re-Install and Install Additional Components 4


1. Backup the EntraPass Corporate Edition Database

1. Logon to EntraPass Corporate Edition software.
2. Go to the **Options** tab.
3. Click the **Backup Data** icon  to open the Backup window.
4. Check the **Automatic Backup** checkbox.
5. By default, the backup will be stored in **c:\Program Files\Kantech\Server_CE\Data**. If you want to change the directory where to store the backup, check the **Specific folder** box and click  to locate the directory.
6. At the bottom of the window, check the **Now** checkbox.
7. Click **OK** to initiate the backup immediately.
8. Once the backup is completed, close the EntraPass Corporate Edition Version application.

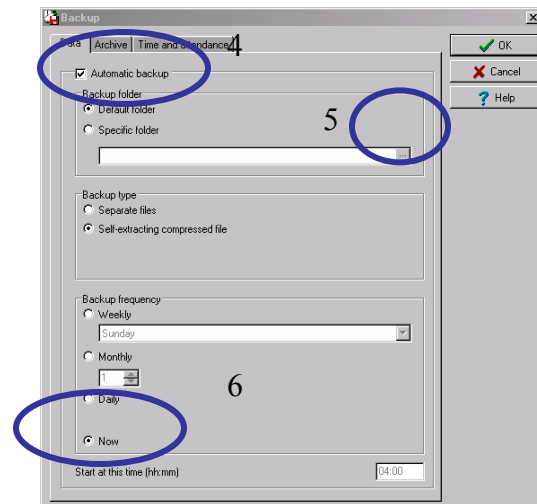

2. Install the EntraPass Global Edition Software

1. Make sure that no EntraPass applications are running on the machine.
2. Using a full version of the **EntraPass Global Edition Version 3** software, install the server, database and first workstation. (Do not install services, gateway or SmartLink at this time). The application serial number is located on the cd.

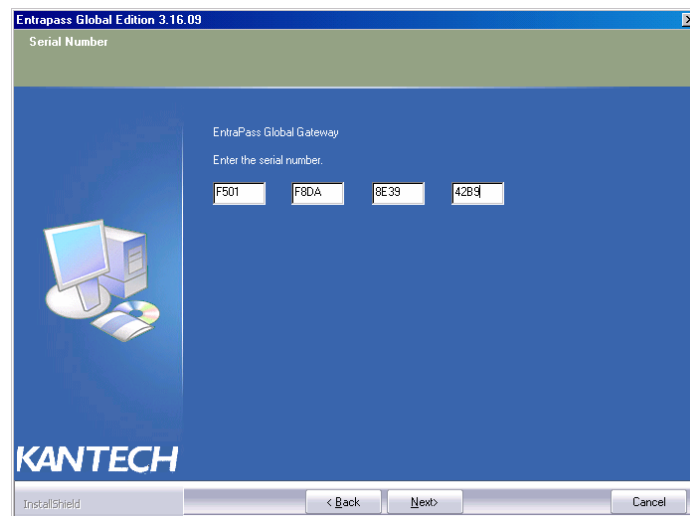



3. Restart the computer at the end of the installation.



DO NOT start the server application at this point.


3. Run the Migration Utility

1. From the Windows **Start** menu, select **Programs > EntraPass Global Edition > Server > Migration** from EntraPass Corporate Edition.
2. The system will prompt you to **Select the language** in which you want to install the software.
3. Click **OK**. The Migration window will open.
4. The **EntraPass Corporate Edition Source Database** field contains the default path where the current database is located and where it will be transferred it in the EntraPass Global directory. You can click  to locate the path if it was changed earlier.
5. Click the **Migrate Database** button to start the migration process.

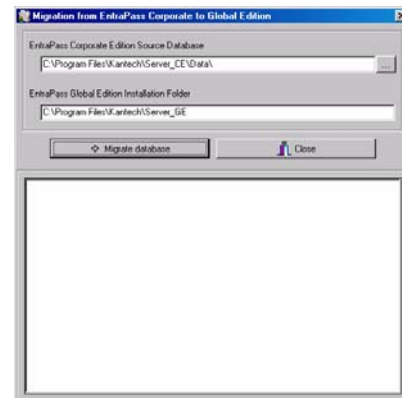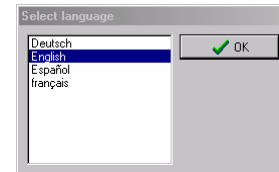

4. Run the EntraPass Global Edition Software

1. From the **Start** menu, select **Programs > EntraPass Global Edition > Server > Server**. The splash screen will be displayed on screen.
2. When prompted to verify the database, click **Yes**.

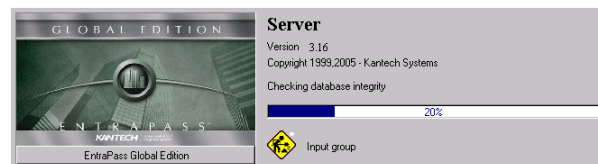

5. Register the EntraPass Global Edition Software

1. Enter your Installer **User name**.
2. For the **Password**, enter the temporary password highlighted in yellow at the bottom of the logon screen.
3. Clicking **OK** will open the EntraPass Global Edition Registration window.
4. You must call Kantech Technical Support to register the system.
5. When the system registration is completed, make a back up of the data in the EntraPass Global Edition.
6. The migration phase is now completed.




6. Re-Install and Install Additional Components

After the migration is completed all the components that were present in the EntraPass Corporate Edition will have been assigned a new installation code. You must re-install the existing components in EntraPass Global Edition, and install the new ones as well.

You will find the registration codes in the System Registration dialog that can be accessed under the **Connections** tab in EntraPass Global Edition Server application or the **Options** tab in the EntraPass Global Edition Workstation application.

1. Make sure that no EntraPass Global applications are running on the machine.
2. Using the EntraPass Global Edition Version 3 cd, install the components that were already installed in EntraPass Corporate Edition as well as new components.
3. When the installation is completed, restart the computer.

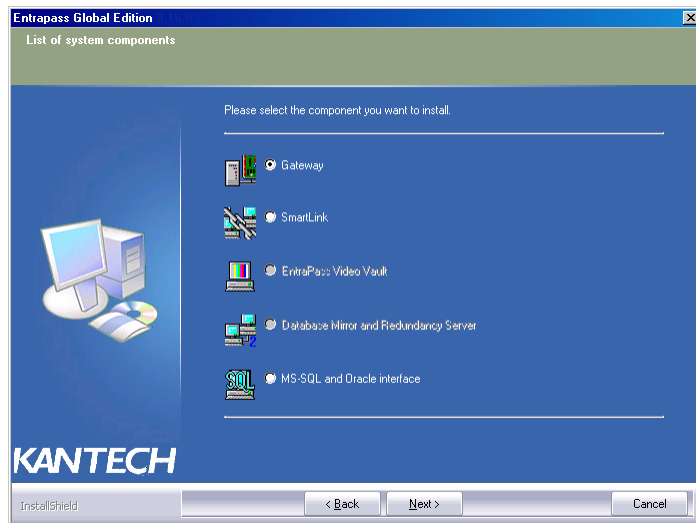

For complete instructions on installing EntraPass Global applications, refer to Chapter 2 of the *Entrapass Global Edition Reference Manual*, DN1316.